


# TRIM CUTTER

## Model 5TOB

For more information about this model, see Bulletin 991 and Application Reports 22 & 23.

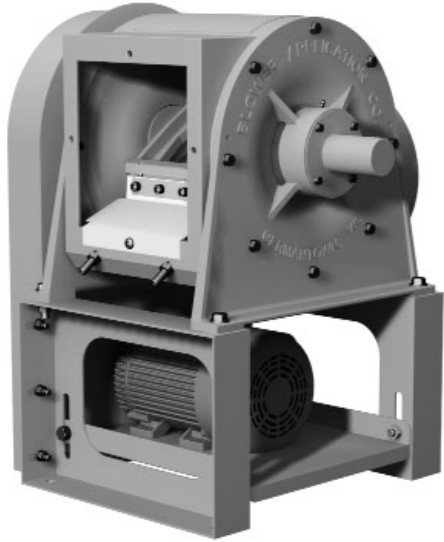

### STRAIGHT-CUT IMPACT ACTION, FROM PAPER TO FINE METAL FOIL

### MAINTAINS CUTTING EDGE WITHOUT IN-PLACE CYLINDRICAL GRINDING

#### Top Performance

The 5TOB trim cutter offers proven BloApCo design with new, innovative maintenance and operating features to achieve higher performance and economy. Driven by a 2-hp electric motor, the 5TOB impact-cuts everything from paper to tough films to metal foil down to 3 mil thick. Varied knife profiles make short work of corrugated and heavy laminated trim up to 8½" wide. A variety of wear-resistant HCHC, NEOR and carbide-edge knives can be arrayed to mate with slitting equipment and can reduce multiple ribbons of trim, depending on weight and thickness, for pneumatic conveying, baling, disposal or recycling.

#### Precise Operation

Cutting with one stationary bed knife and two rotating knives, the 5TOB makes two cuts per revolution at speeds from 500 to 2,000 rpm and passes 3,000 cfm of air at a static pressure loss of 1.5" wg at air velocities of 5,000 fpm. Rotor-mounted set screws make the knives individually and easily adjustable for maximum precision – and easy to remove for sharpening, with no need for "in-body" rotor grinding. Precision tapered roller bearings eliminate end play and runout problems, keeping clearances precise longer. Open rotor design allows fast, free flow of cut material through the cutter housing.

#### Easy Installation

Installation of a 5TOB trim cutter is quick and simple: The cutter is factory-tested, tailored to your application, and shipped completely assembled and ready to run.

#### CAPABILITIES

##### Materials

Paper, corrugated and heavy fiber board

##### Trim Width max

8½" (216 mm)

##### Caliper Range

3 mil to 250 mil  
0.00300" to 0.25000"  
0.0762 mm to 6.350 mm

##### Air Capacity

3,000 cfm 5,100 m<sup>3</sup>/hr

##### Static Pressure Loss

1.5" wg. @ 5,000 fpm air velocity

##### Drive

V-Belt or Direct Drive

##### Cutting Action

Impact

##### Rotor speed

500 to 2,000 rpm

##### Weight

355 lbs. (161kg) with motor

##### Dimensions

L x W x H: 22<sup>5</sup>/<sub>8</sub>" x 18<sup>1</sup>/<sub>2</sub>" x 28<sup>3</sup>/<sub>4</sub>"  
(574.7 mm x 469.9 mm x 730.3 mm)

#### FEATURES





- Rotor-mounted knife-adjustment screws for fast, easy setups
- Multiple knives: HCHC, NEOR, NEOR metal grind, carbide-edge
- Class "O" tapered roller bearings eliminate endplay and runout
- Rotor shaft supported by tapered roller bearings maintains rotor stability for long life
- V-belt, direct or gear-motor drive
- Open-rotor design facilitates passage of air and material
- Multiple mounting arrangements
- Flanged inlet, slip-fit outlet positions
- Multiple inlet positions
- 2 HP 3/60/460-volt TEFC motor is standard

#### OPTIONS

- Oil mist unit
- Flywheel
- Safety disconnect switch
- Tandem rail mounting with BloApCo material-handling fan

# Dimensions

Model 5T0B

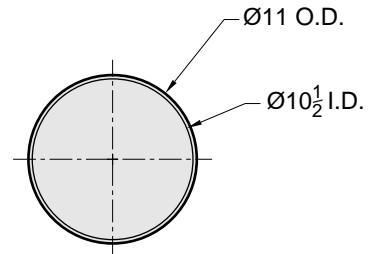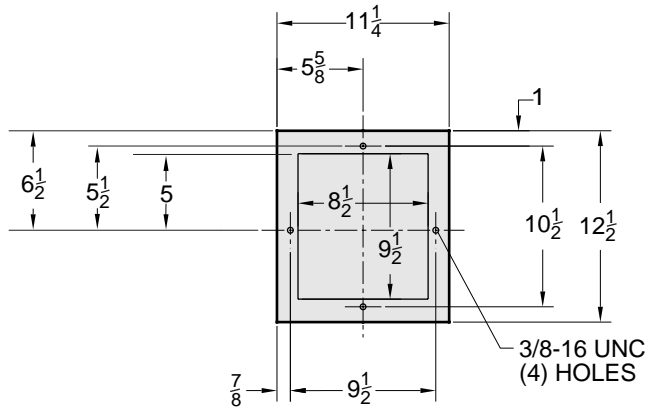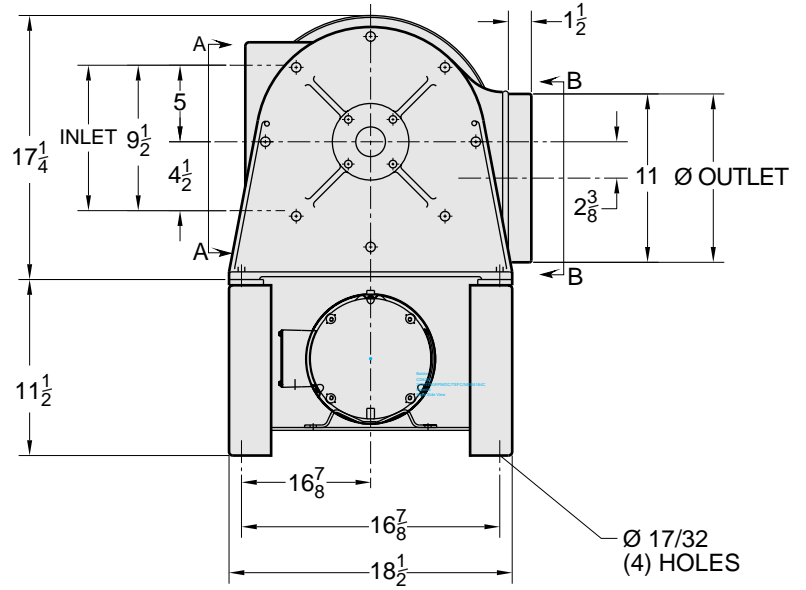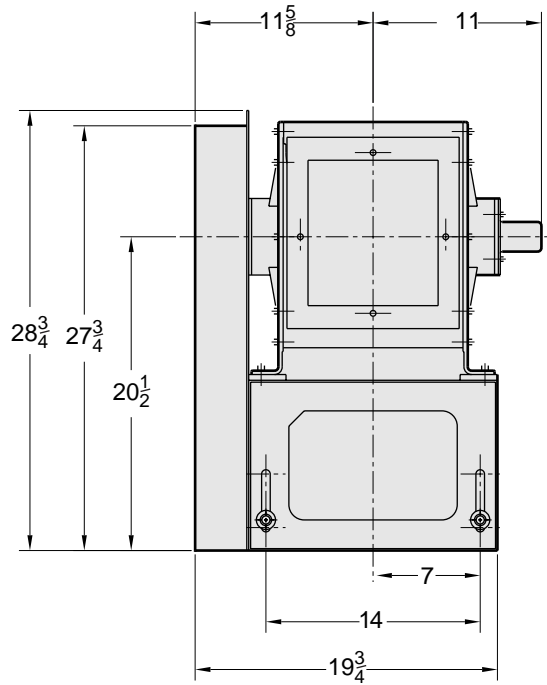

VIEW "A-A"  
INLET

VIEW "B-B"  
OUTLET

For more information about this model, see Bulletin 991 and Application Reports 22 & 23.



**BloApCo**  
Blower Application Company

N114 W 19125 Clinton Drive • P.O. Box 279 • Germantown, WI 53022-0279 • 800.959.0880 • 262.255.5580 • FAX: 262.255.3446 • bac@bloapco.com • bloapco.com